



SSX-180ST

SolarMaxx 180 Illuminator

Service Manual



6018 Bowdendale Avenue
Jacksonville, FL 32216
Customer Service: 904 731-5869 FAX 904 733 0012
Toll Free 800-684-6404

180 WATT XENON SERVICE MANUAL

TABLE OF CONTENTS

	PAGE
INTRODUCTION	3
TECHNICAL SUPPORT SERVICES	3
GENERAL THEORY OF OPERATION	3-4
SHUTTER REPLACEMENT	5
I.R. FILTER ASSEMBLY REPLACEMENT	5-6
LAMP BASE REPLACEMENT	6
POWER SUPPLY REPLACEMENT	7
COOLING FAN REPLACEMENT	7-8
LAMP REBUILD PROCEDURE	8-9
REPLACEMENT PARTS	10
FIGURE 1	11
FIGURE 2	12

180 WATT XENON SERVICE MANUAL

INTRODUCTION

This manual has been prepared to aid in the repair and maintenance of the 180-Watt Xenon Illuminators.

The procedures and instructions contained in this document are to be used by qualified technical personnel only. Some procedures may have live exposed circuitry and wiring which could be hazardous if contacted with. Use extreme caution when working on equipment that has power applied to it.

TECHNICAL SUPPORT SERVICES

In the event that you experience difficulty or need technical assistance, please contact our technical support staff at (904) 731-5869 or Toll Free 800-684-6404 and/or by fax at (904) 733-0012 .

Please have the following information ready when you call:

- MODEL NUMBER
- SERIAL NUMBER
- DETAILED DESCRIPTION OF THE PROBLEM

GENERAL THEORY OF OPERATION

The SolarMaxx 180 Illuminator general operation is as follows. Please consult Fig. 1 for wiring information.

A.C. POWER DISTRIBUTION

The SolarMaxx 180 Illuminators are based around a universal input power supply. Input line voltages of 100-120 V ~ and 220-240V ~ at 50/60 Hz are applied at the Power Input Model via a hospital grade power cord. The input power is then filtered by a low leakage current EMI Filter. Over current protection is provided by two fuses. A double-pole interlock switch provides operator safety, which is located on back left side of the lamp heat shield.

DC POWER DISTRIBUTION

DC Power for the other system components is generated by the lamp power supply. In addition to the 12.5 volts DC lamp power, it generates + 12 VDC. The 12 VDC is used to power the cooling fan and the elapsed lamp hour meter.

180 WATT XENON SERVICE MANUAL

INTENSITY CONTROL

A rotating stainless steel disc that is placed in front of the lamp controls intensity. The disc contains holes in varying sizes and patterns. Manual lamp intensity control is made via a front panel mounted knob.

LAMP POWER AND IGNITION SYSTEM

The lamp used in the SolarMaxx 180 illuminators is a 180-watt ceramic arc lamp. For ignition of the lamp to occur, it takes a high voltage pulse of approximately 20KV. The power supply generates a pulse of approximately 400-600 volts, which is then stepped up to the 20 KV pulse by the igniter module circuitry. Connection to the lamp is made via two jumbo banana jacks.

The lamp power and ignition system consists of the lamp power supply, lamp base assembly, and the lamp cartridge assembly. In the event you have a power supply failure, it is recommended that the power supply be returned to SUNOPTICS SURGICAL® for servicing. When power supply is switched on, the DC supplies come up to voltage immediately. The lamp power supply has a built in delay of 1 to 2 seconds before it will attempt to start the lamp. If the lamp is unsuccessful at igniting, the power supply will try six to ten times in rapid succession before ceasing. After successful ignition the supply switches to a 12.5 VDC output at approximately 14 amps of current.

COOLING SYSTEM

Cooling is provided by a 100 CFM, 12 VDC fan. Air is drawn through the sides of the unit, across the power supply and lamp, and exhausted through the rear mounted exhaust louver. An infrared filter which is located between the lamp lens and the lamp housing provides additional cooling of the light. This filter blocks the infrared "heat" from the output turret while passing the visible light, thus lowering the temperature of the instruments and cables. Caution should still be used, as there are still potentially hazardous temperatures at the turret.

PARTS REPLACEMENT PROCEDURES

The following procedures are meant to aid the technician/engineer in replacing defective or damaged components. These procedures are meant to be used by qualified personnel only. Extreme caution should be used and all necessary safety precautions taken when working on this equipment.

180 WATT XENON SERVICE MANUAL

SHUTTER REPLACEMENT

1. Disconnect the illuminator from the power source.
2. Remove the eight cover screws in the sides of the unit.
3. Remove the three screws on the bottom of the unit with hold the front panel to the bottom housing. Remove the two screws on the side of the front panel.
4. Remove the screw holding the shutter to the front panel.
5. Pull off the shutter assembly.
6. Replace the shutter assembly with the new one.
7. With the control turned fully clockwise, align the shutter in such a way that it does not cover the hole in the front panel. Replace the screw and tighten the screw until it holds the shutter in place and still allows for free movement of the shutter. ***Do not over tighten the screw.***
8. Replace the front panel and secure to the bottom housing with the five screws.
9. Replace the top cover making sure the lamp access door is over the lamp cartridge.
10. Replace the eight cover screws and secure.

I.R. FILTER ASSEMBLY REPLACEMENT

CAUTION: Before performing this procedure, be sure the unit has cooled to room temperature. The lamp cartridge and IR filters operate at very high temperatures.

1. Disconnect the illuminator from the power source.
2. Open the lamp access door and remove the lamp, gently rocking from front to back. Set lamp aside.
3. Place unit on its right side. Reach in the lamp access door and hold onto the IR filter assembly while removing the two mounting screws from the bottom.
4. Remove the assembly through the lamp access door.

180 WATT XENON SERVICE MANUAL

5. Replace the new assembly into the unit through the lamp access door. Note that the IR filter is facing toward the back of the unit.
6. Secure with the two mounting screws from the bottom.
7. Place the unit back on its feet. Install the lamp, being sure it has totally seated, and close the access door.

LAMP BASE REPLACEMENT

CAUTION: Before performing this procedure, be sure the unit has cooled to room temperature.

1. Disconnect the illuminator from the power source.
2. Remove the eight cover screws in the sides of the unit.
3. Open lamp access door and lift the top straight up and off the unit. Set aside.
4. Remove the lamp cartridge assembly, gently rocking from front to back. Set lamp cartridge aside.
5. Disconnect the power supply lamp wires from the lamp base igniter module at the (+) and (–) terminals on the igniter circuit board.
6. Place the unit on its side.
7. From the bottom, remove the four screws that hold the lamp base to the bottom panel.
8. Remove the lamp base from the unit. Place the new lamp base igniter assembly into the unit with the banana jacks in the heat shield area. Secure with the four screws to the bottom of the unit.
9. Place the unit back on its feet.
10. Reconnect the lamp power supply wires to the igniter module terminals.
11. Install the lamp cartridge, being sure it is totally seated.
12. Replace the top cover making sure the lamp access door is over the lamp cartridge.
13. Replace the eight cover screws and secure.

180 WATT XENON SERVICE MANUAL

POWER SUPPLY REPLACEMENT

1. Disconnect the illuminator from the power source.
2. Remove the eight cover screws in the sides of the unit.
3. Open lamp access door and lift the top cover straight up and off the unit. Set aside.
4. Disconnect the fan lead connector, the AC power input connectors, and the lamp output power wires from the power supply.
5. Set the unit on its side.
6. While holding the power supply with one hand, remove the four mounting screws from the bottom of the unit.
7. Place the new power supply in the unit so all four holes line up with the power supply standoffs. Secure with the 4 mounting screws from the bottom.
8. Place the unit back on its feet.
9. Reconnect the fan lead connector, the AC power input connectors, and the lamp output power wires to the power supply.
10. Replace the top cover making sure the lamp access door is over the lamp cartridge.
11. Replace the eight cover screws and secure.

COOLING FAN REPLACEMENT

1. Disconnect the illuminator from the power source.
2. Remove the eight cover screws in the sides of the unit.
3. Open the lamp access door and lift the top cover straight up and off the unit. Set aside.
4. Disconnect the fan lead connector and the hour meter wiring harness connector from the power supply.
5. Remove the three screws holding the back panel to the bottom housing and lay down the panel.

180 WATT XENON SERVICE MANUAL

6. Remove the fan mounting screws and nuts. This will free the fan louver also.
7. Replace the fan assembly with the airflow blowing out the back of the unit. The fan leads should be coming out of the fan at the tip and against the back panel.
8. Secure the fan mounting screws with the nuts.
9. Slide the back panel into the mounting slots.
10. Reconnect the fan lead connector and the hour meter wiring harness connector to the power supply.
11. Replace the top cover making sure the lamp access door is over the lamp cartridge.
12. Replace the eight cover screws and secure.

LAMP REBUILD PROCEDURE

See Fig. 2 and for reference.

When rebuilding the Xenon lamp cartridge, it is recommended to replace several key components of the cartridge assembly. These components are included when you purchase a replacement rebuild kit from **Sunoptic Technologies®**.

CAUTION: Before performing this procedure, be sure the unit has cooled to room temperature.

WARNING: Lamps are under high pressure and must be handled with care. A face shield should be worn when handling this lamp.

The following procedure will guide you through rebuilding your Xenon lamp cartridge.

PFC LAMP REBUILD PROCEDURE FIG. 2

The following procedure will guide you through rebuilding your PFC Xenon lamp cartridge.

Tools required: Screw driver and adjustable wrench.

1. Be sure lamp has cooled to room temperature.
2. Remove the brass plugs from the bottom of the unit. Press the lamp assemblies from the back, out of the lamp housing.

180 WATT XENON SERVICE MANUAL

3. Set the lamp face down on its front Heatsink.
4. Remove the copper clips from both heatsink.
5. Gently pull the lamp out of the heatsinks.
6. Remove the cooling ring from the lamp.
7. Clean off all the parts with a rag or paper towel, alcohol may help in heatsink compound removal.
8. Remove the new lamp from its package. Record its serial number and date installed in the illuminator manual.
9. Set the lamp face down with its protective cap on its lens. If the lamp has a rubber cap on the fill tube on the rear of the lamp, remove it.
10. Apply a thin film of heatsink compound to the metal surface of the lamp and the inside contact area of the front and back heat sinks. Be careful not to get compound on the lamp glass surface. If you do, clean the lamp with a clean alcohol wipe.

CAUTION: Only apply a thin layer of heatsink compound to areas.

11. Press the lamp into the back heatsink making sure the fill tube is aligned at six O'CLOCK
12. Install copper clips.
13. Remove the end cap from the front of the lamp. Use care not to touch the window of the lamp.
14. Apply heatsink compound to the front outside diameter of the lamp.
15. Press the cooling ring onto the front of the lamp.
16. Press the front heatsink assembly onto the lamp/cooling ring assembly. Align the threaded holes in the bottom of the two heatsinks with each other.
17. Secure the front heatsink onto the lamp with the copper clips.
18. Align the threaded holes in the bottom of the heatsink with the bottom of the lamp housing, and press the entire lamp assembly into the lamp housing, so that when the lamp is pointing toward you, the window of the lamp is pointing to the front panel. Install the two brass plugs into the bottom of the lamp assembly and tighten.

180 WATT XENON SERVICE MANUAL

REPLACEMENT PARTS

DESCRIPTION


PART NUMBER

Replacement lamp cartridge	SSX0048
180-Watt Xenon power supply	I3000120
Hour meter	I2000012
IR filter assembly	300w lens assembly
Power input module/EMI filter	3000108
Shutter assembly	SSX0033
Cooling fan	I3000084
Reset switch assembly	I2000041
Xenon lamp	SSX0048

For parts not listed here, call our Technical Service Department listed at the front of the manual.

180 WATT XENON SERVICE MANUAL

FIGURE 1

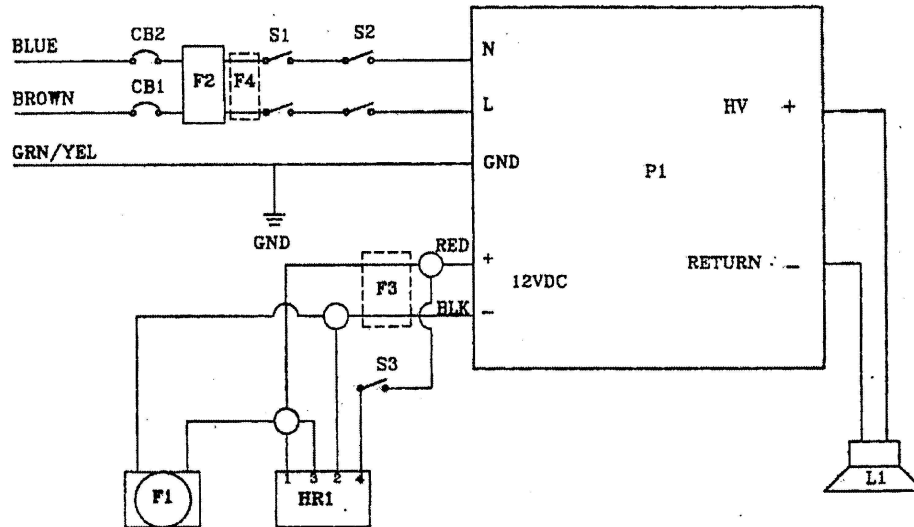

CODE	PART NUMBER	DESCRIPTION	QTY.
CB1/CB2	I3000109	3.0 AMP FUSES	2
S1	I1104000	LIMIT SWITCH	1
S2	I1245501	ON/OFF SWITCH	1
P1	I3000120	180 WATT POWER SUPPLY	1
F1	I3000084	12 VDC FAN	1
HR1	I2000012	12 VDC HOUR METER	1
L1	SYC0048	XENON 180 WATT LAMP	1
F2	I3000108	EMI FILTER	1
F3/F4	I1180007	INTERNAL FERRITE	2
S3	I200041	HOUR METER REST SWITCH	1

180 WATT XENON SERVICE MANUAL

FIGURE 2

